




LUGGAGE BRACKETS **TR**

Attaching:

The Luggage Brackets are attached to the sides of the Triumph accessory rail. Install them between the rail and the Grab Rail/Sissy Bar using the two bolts per side. The Luggage Brackets can also be mounted without any accessory on the outside.

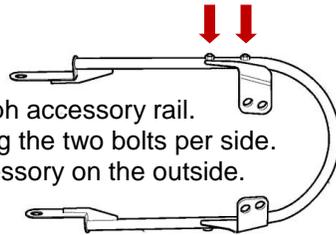


Installation:

- The **FRONT** mount is positioned inside the washer & cap bolt as shown ⇨

The shock absorber pivot bolt need not be removed –only loosened enough to slide the front mount under the washer. Remove the accessory side bolts on one side and with the front mount on the pivot bolt and position the rear mount between the rail and the accessory. Tighten as before.



- The **REAR** mount is positioned between the accessory rail and the Grab Rail / Sissy Bar mount ↴

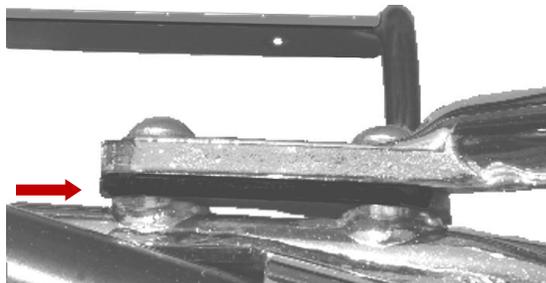

To Mount Luggage:

- The use of *slanted* bags is highly recommended and they should follow the leading edge of the Bracket to avoid contact with the shock absorber. If straight bags are used, check for clearance and use a spacing plate to obtain a contact-free mount (see website FAQ for Luggage Brackets).

❖ **Standard Saddlebags (over-the-seat):**

Use the holes in the crossbar and/or the lower mounting hole as tie-downs or bungee mounts for removable luggage.

❖ Bolt-on Saddlebags or Hard Bags:

- To offset the recessed crossbar, use **spacer washers** to provide a flush surface for the upper mounting holes.
- Attach using any or all of the holes in the crossbar and the bottom mounting hole for lower support. You can use 1/4" bolts and your choice of nuts to secure the luggage. It is advisable to use *nylon insert locknuts* or *threadlocker* (e.g., Loctite) on the nuts to prevent loosening under vibration.
- Leather saddlebags can be mounted with the connecting strap folded under. Simply fold the strap tightly to the back of the bag and secure with tape. First, position the bags with the Luggage Brackets mounted and mark the location of the crossbar to make sure height is correct. Then, dismount and use the Bracket to mark hole locations on the bag and drill 1/4" holes at the marks. --[check Quick Mounts web page for detailed instructions]

❖ Quick Mounts:

- Prepare the crossbar as outlined in the Quick Mount instructions.

Powder Coating Finish:

This is a coating process involving negative-charged particles sprayed on a positive-charged surface (or vice versa) and baked to harden. As a coating, it can be considered a type of paint. Although one of the most durable coatings used today, it should still be treated as paint. It can be scratched or pitted and any evidence of bare metal should be handled by applying a suitable protective touch-up correction (paint) to prevent rust and corrosion. [Note: satin-black or semi-gloss black should match the appearance of the Brackets]

Limited Warranty

MC Resources strives to provide products that meet high standards for quality and durability and warrants to the original purchaser that this product is free from defects in materials or workmanship for the period of ninety days from the date of purchase. This warranty does not apply to damage due directly or indirectly to misuse, abuse, negligence, or repairs or alterations to the product. In no event shall MCR be liable for personal or property damage due to the use of our products. All warranty claims must be first reported to MCR and repairs, adjustments, or returns must be issued an RMA number provided by MCR.

* MCR states no specific intended use for this product and the purchaser must make appropriate reasonable and prudent judgment as to its application. If uncertain, we recommend testing the application in a safe and secure environment prior to actual use.