


# LUGGAGE MOUNTING TEMPLATE

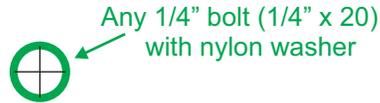


Truss-Bolt head must be on inside of plate --NO nylon washer necessary

## MARKING HOLE POSITIONS:

1. Attach Luggage Brackets and Quick Mounts to the motorcycle.
2. Place masking tape (easy to remove) along the top edge of the bags to be mounted. NOTE: if you have soft bags, you can fold the strap tightly against the back side of the bag and drill through both the strap and bag.
3. Position the bags on the Quick Mount for proper height –ideally, the top the bag should be level with the top of the Quick Mount. Using a pen or pencil, draw a line at the top of the crossbar onto the masking tape that you put on the bags. You now have the proper height marked.
4. Remove the Quick Mount from the Bracket and place it on the back of the bag (with the bag's crossover strap folded down tightly against the back of the bag). Position the front slant of the bag along the slant of the Quick Mount and mark through the bolt holes of the Quick Mount onto the bags rear surface.
5. Double check the marked hole locations.
6. Drill through the bag with a 1/4" drill. Tip: A cleaner hole is made with a backing board behind the leather and a more accurate placement can sometimes be achieved by using an awl or sharp point to mark the hole centers.



**\*\* Note: positioning the bag higher than the crossbar could make using the key lock more difficult, BUT bags should never be mounted so low as to be damaged by the exhaust. A compromise is sometimes necessary.**

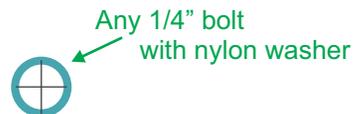

**MCR**  
**QUICK MOUNT**  
1.5mm

4 inch gauge to measure copy accuracy:

