


QUICK MOUNTS Template_2

LUGGAGE BRACKET PREPARATION

U-Channel BUMPER PLACEMENT: (**necessary for proper operation!*)

1. Mark the location of the bumpers on the crossbar using these templates for the left & right sides (from the rear, i.e., the Luggage Bracket rear mount leaning toward you).
2. Apply adhesive to the top of each channel and press into the proper location (note: covering the entire inside surface is not necessary)

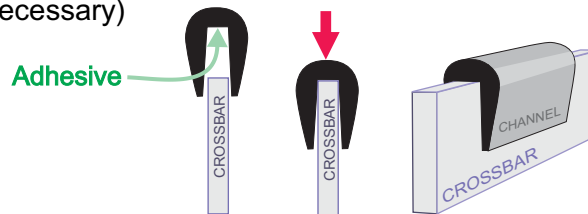

TIP: In tests, a toothpick swirled in adhesive & twisted in the top of the U-channel bumper gap applied the proper amount of adhesive.

3. Notes: use a strong weatherproof rubber adhesive –a two stage epoxy has worked very well in our tests. Make sure surfaces are clean and dry (isopropyl alcohol will clean without residue but it does contain water and must be completely dry before gluing).
4. Let the adhesive cure according to its directions.

**The bumpers are rubber and, as such, will wear with use. Replacement may be necessary in the future and using as little adhesive as possible while maintaining a secure attachment is advised to make removing and re-attaching new bumpers easier.*

